


INSTALLATION INSTRUCTIONS

Herakles

100014

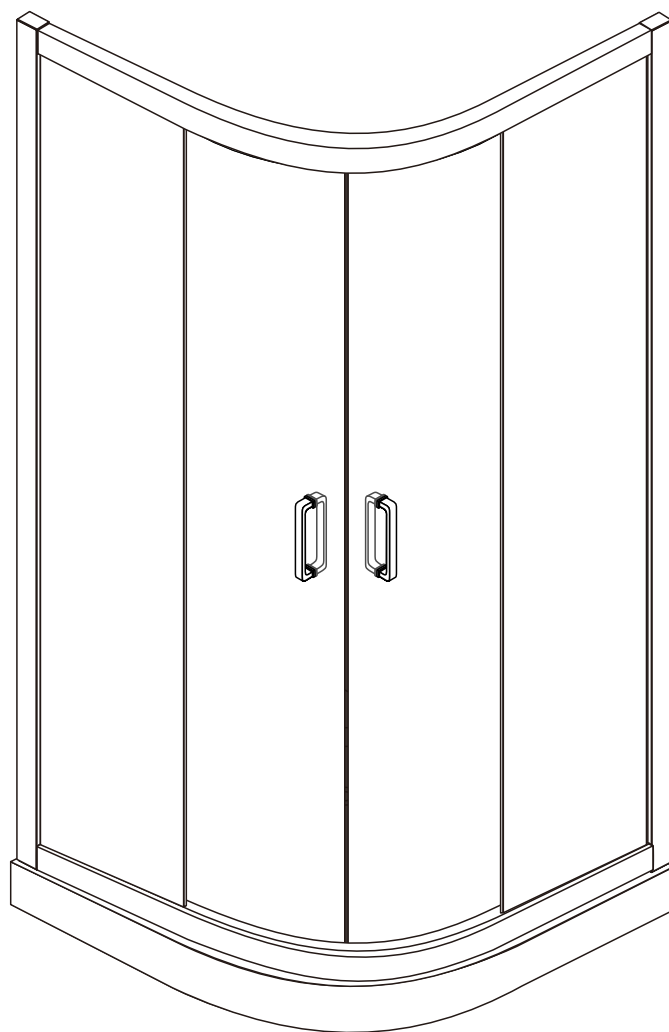

◆ General Information

Please inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing fault. Damage reported later cannot be accepted. Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.

Notes: Safety glass can not be re-worked.

Please read these instructions carefully before start of installation.

Special care should be taken when drilling walls to avoid hidden pipes or electrical cables.

Note: This product is heavy and may require two people to install.


Aftercare instructions

After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts may be deposited and allowed to build up. Cleaners of a gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers.

Glass cleaners can be used but with caution, if in doubt contact the manufacturer of the cleaner in question.

Please keep these instructions for aftercare and customer service details.







Tools Required

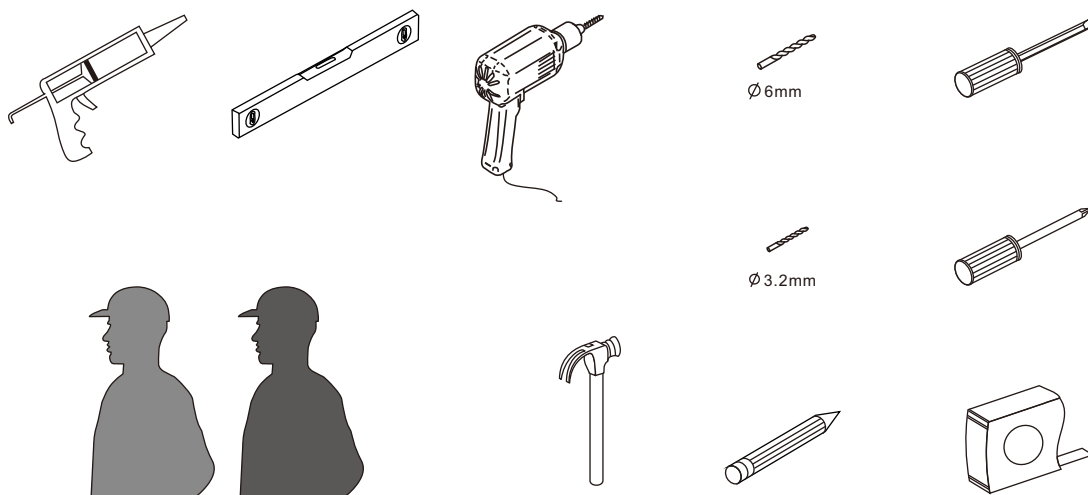


This product is heavy and may require two people to install.



◆ Box Contents:

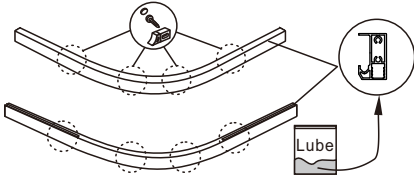1xInstallation Instruction.	➔	
[1] 1xTop Horizontal Rail. [2] 1xBottom Horizontal Rail 8xScrews ST4x35. 1xLube.	➔	
[3] 8xWall Plugs. [4] 8xScrews ST4x35.	➔	
[5] 8xScrew Cover Caps. [6] 8xScrews ST4x10.	➔	
[7] 2xHandle Sets.	➔	
[8] 2xWall Posts.	➔	
[9] 4xWater Deflectors.	➔	
[10] 2xMagnetic Seals.	➔	
[11] 2xFixed Panels.	➔	
[12] 2xDoor Panels. 4xTop Rollers. 4xBottom Rollers.	➔	
[13] 4xProfile Covers.	➔	

◆ Assembly Drawing





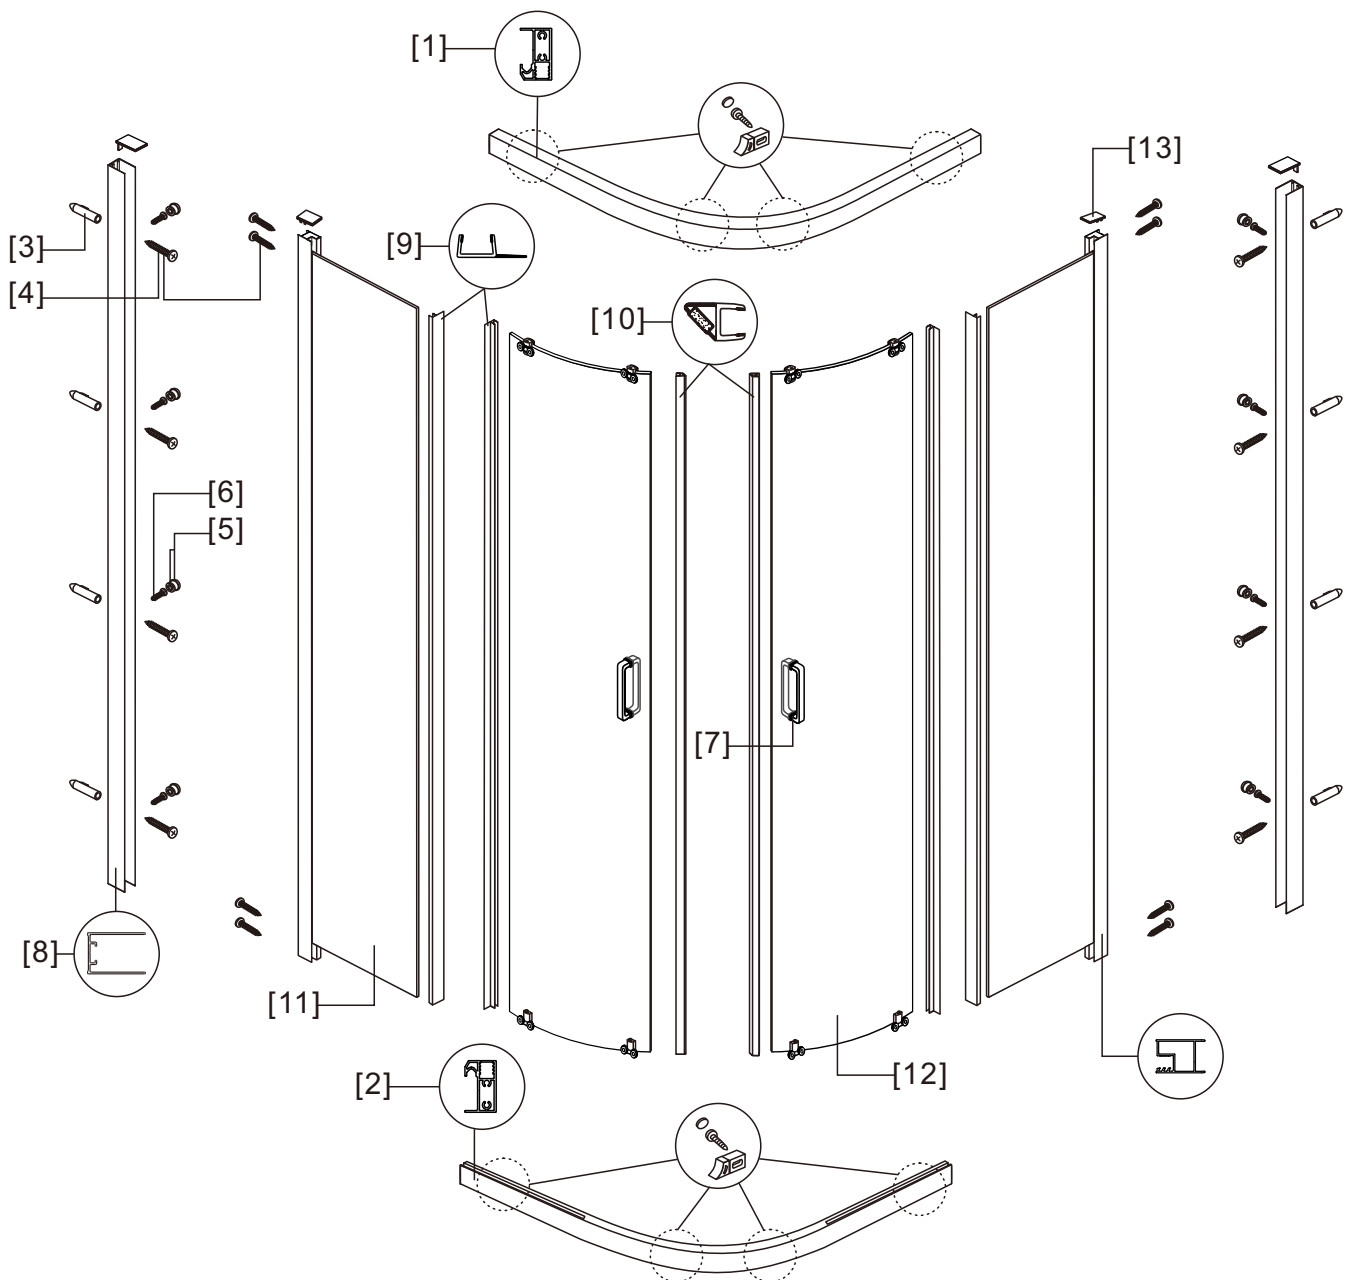


- [1] 1xTop Horizontal Rail.
- [2] 1xBottom Horizontal Rail.
- [3] 8xWall Plugs.
- [4] 16xScrews ST4x35.
- [5] 8xScrew Cover Caps.
- [6] 8xScrews ST4x10.
- [7] 2xHandle Sets.





- [8] 2xWall Posts.
- [9] 4xWater Deflectors.
- [10] 2xMagnetic Seals.
- [11] 2xFixed Panels.
- [12] 2xDoor Panels.
- [13] 4xProfile Covers.

◆ Installation Steps



Step 1

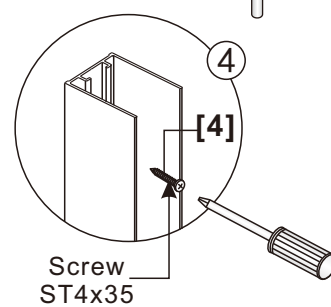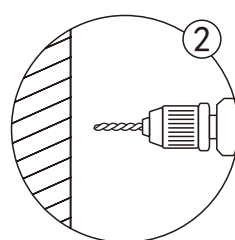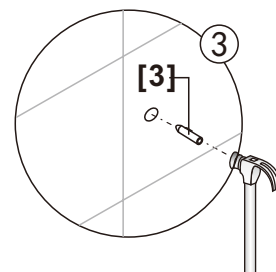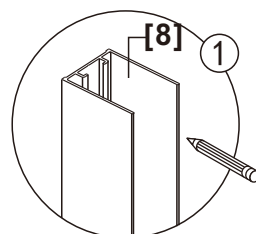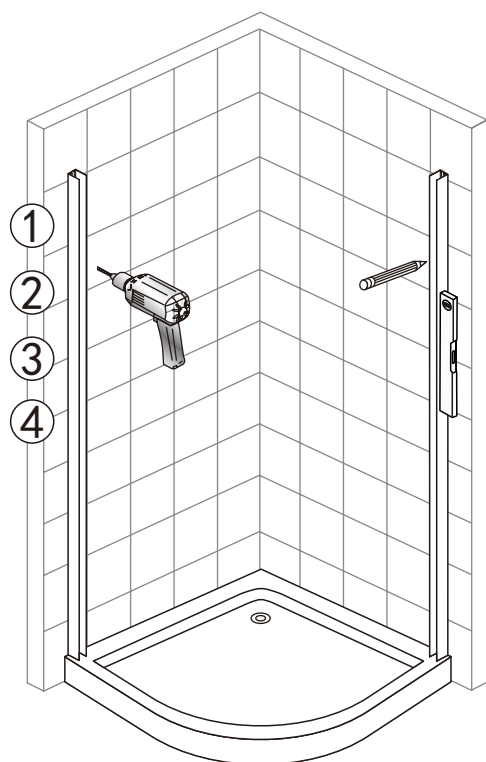

Step 2

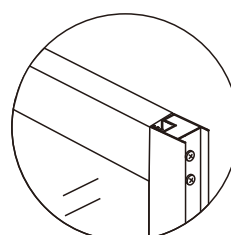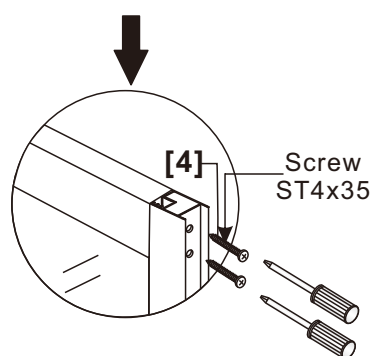
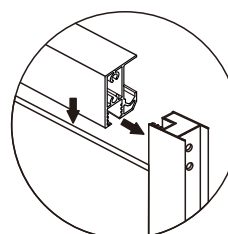
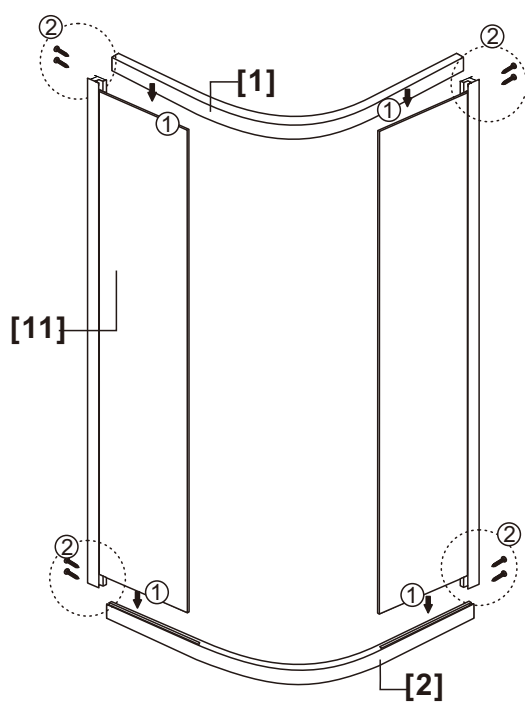


Step 3

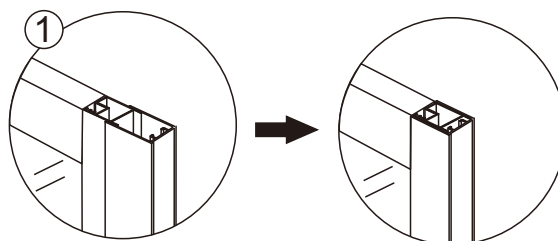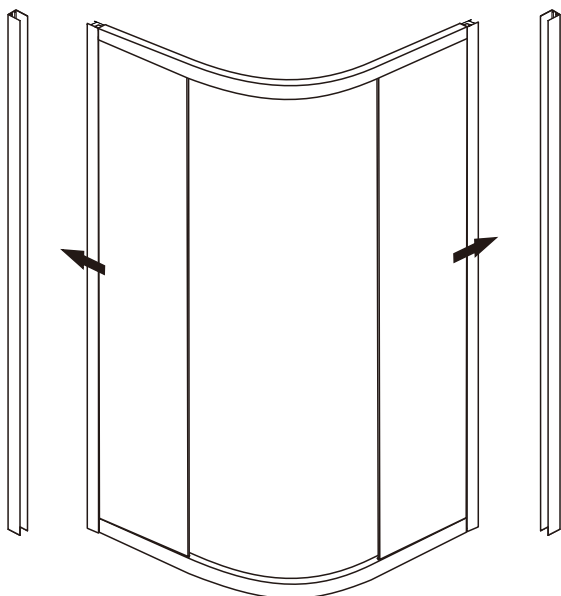

View from inside

Step 4

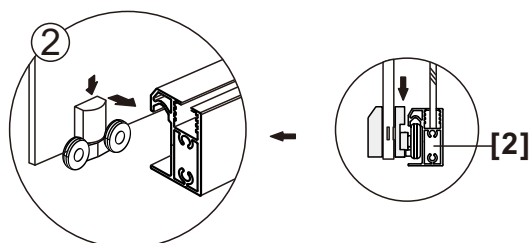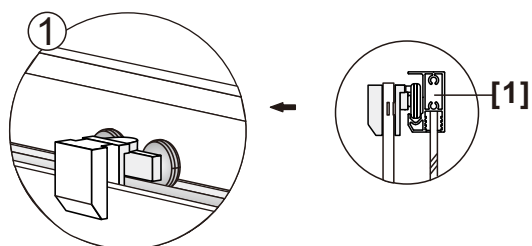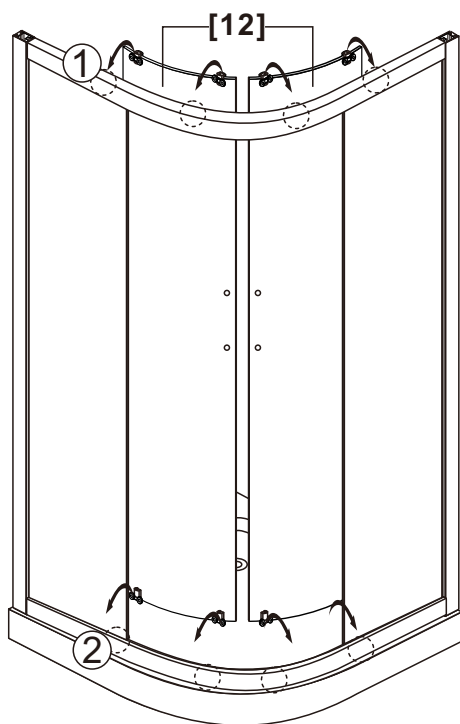


The clip wheels will use on the bottom

Step 5


The longer ones are for door panels.

The shorter ones are for fixed panels.




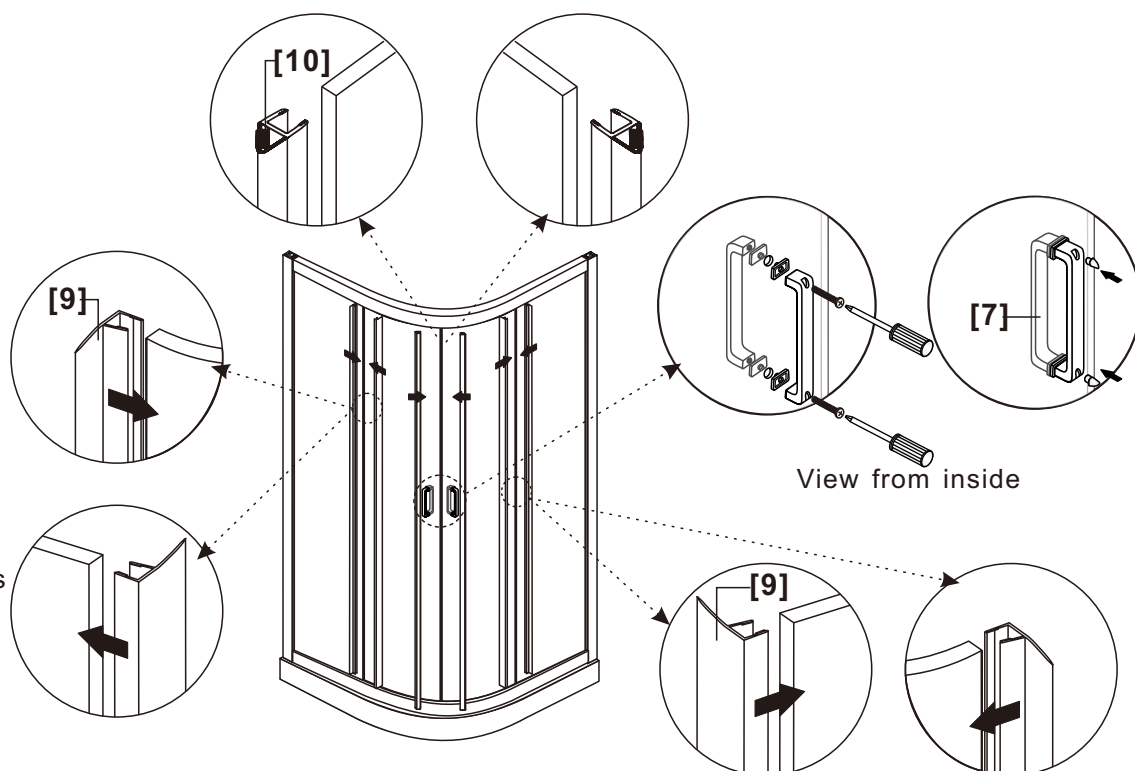


Using a spirit level, adjust the enclosure until square, the posts should be vertically plumb.

Step 6


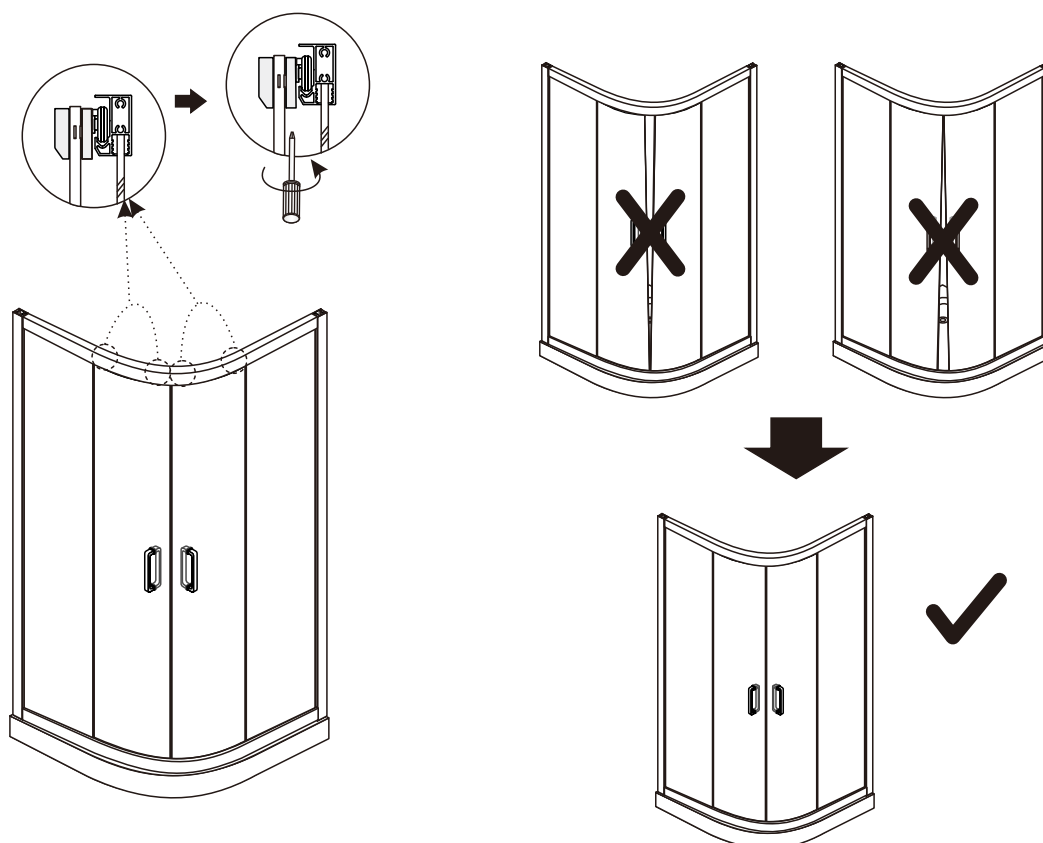


Step 7

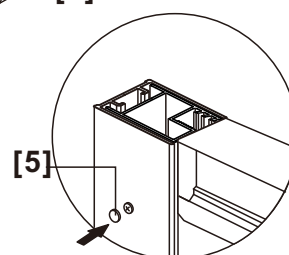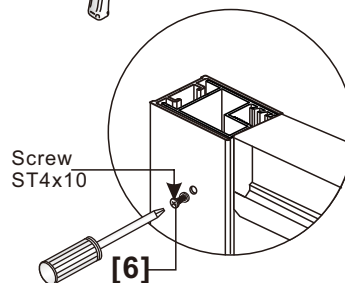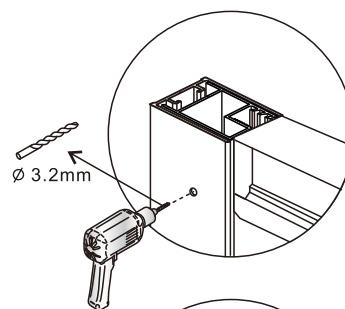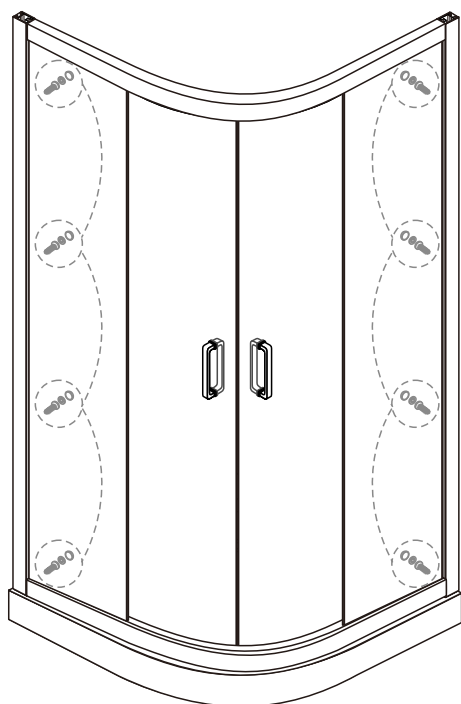

View from inside

Step 8

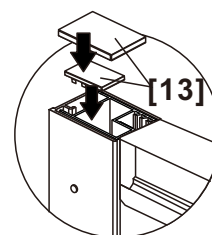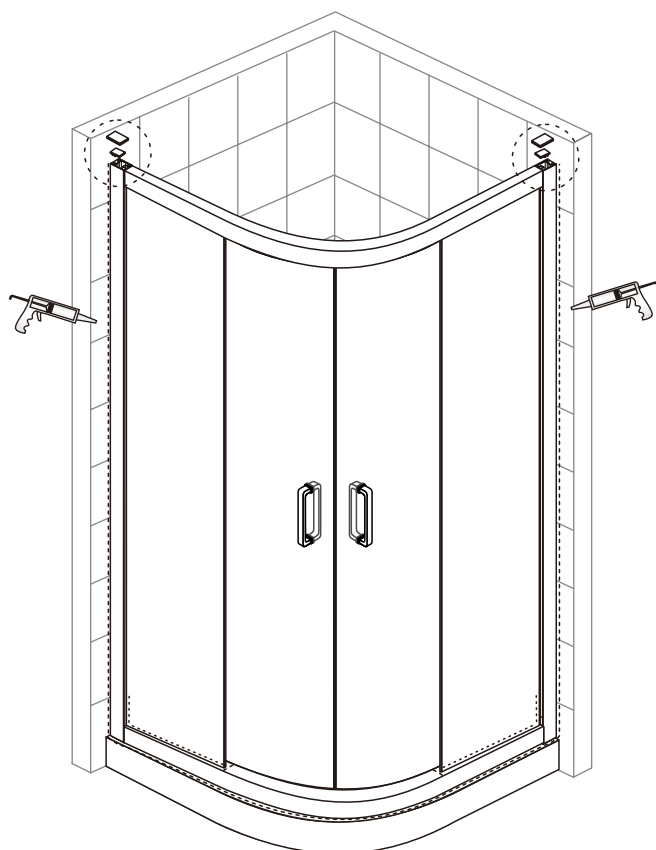

Allow 24 hours for silicone to dry before use.