


INSTALLATION INSTRUCTIONS

Tetrágono

100010/100011

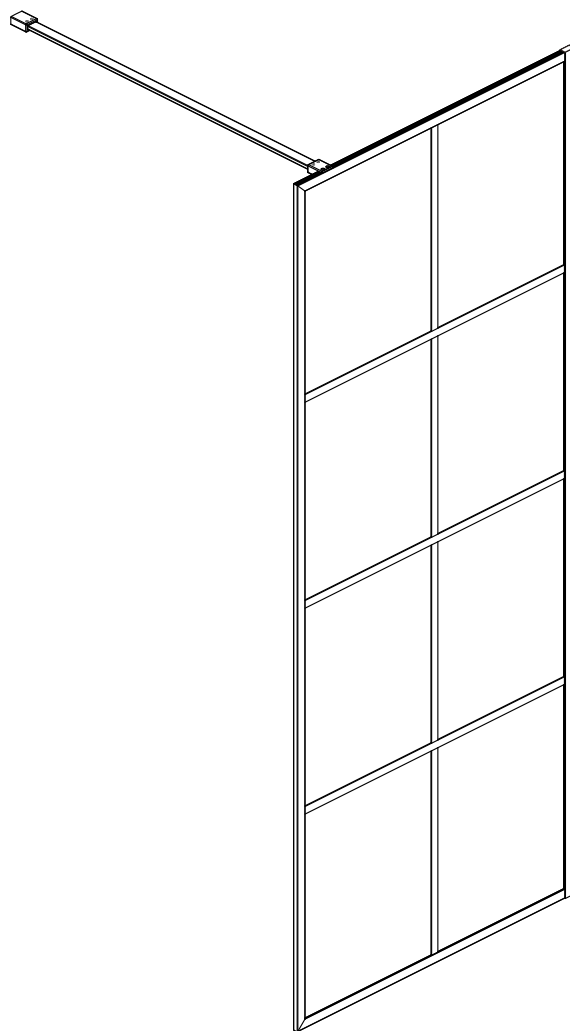

◆ General Information

Please inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing fault. Damage reported later cannot be accepted. Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.

Notes: Safety glass can not be re-worked.

Please read these instructions carefully before start of installation.

Special care should be taken when drilling walls to avoid hidden pipes or electrical cables.

Note: This product is heavy and may require two people to install.


Aftercare instructions

After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts may be deposited and allowed to build up. Cleaners of a gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers.

Glass cleaners can be used but with caution, if in doubt contact the manufacturer of the cleaner in question.

Please keep these instructions for aftercare and customer service details.




Tools Required

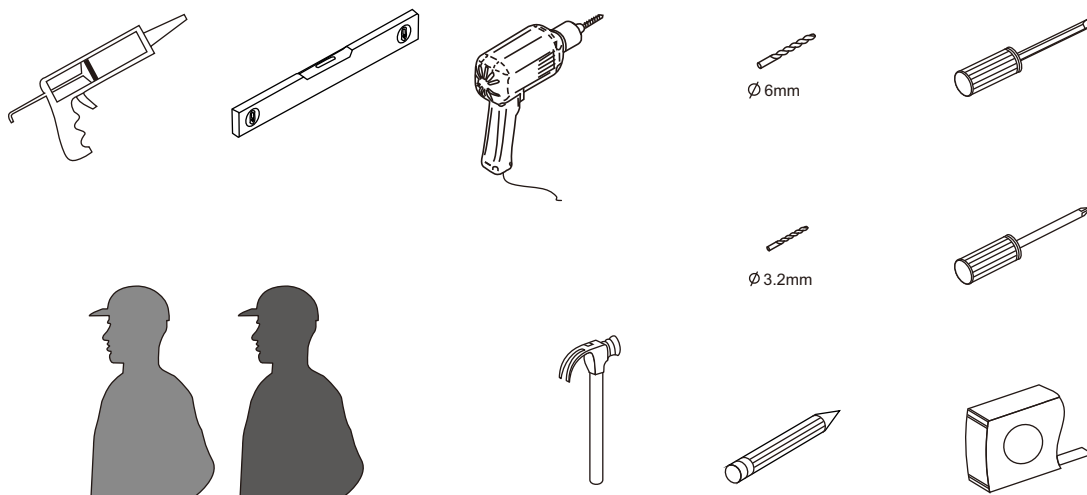


This product is heavy and may require two people to install.



◆ Box Contents:

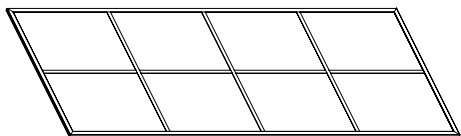1xInstallation Instruction.	➔	
[1] 5xWall Plugs. [2] 5xScrews ST4x35.	➔	
[3] 4xScrew Caps.	➔	
[4] 4xScrews ST4x10.	➔	
[5] 1xWall Post Cover.	➔	
[6] 1xSupport Bar Glass Clip. [7] 2xScrews ST4x12. [8] 1xSupport Bar Wall Bracket.	➔	
[9] 1xSupport Bar.	➔	
[10] 1xWall Post.	➔	
[11] 1xSide Panel.	➔	
[12] 1xAllen Key. [13] 1x3.2mm Bit.	➔	

◆ Assembly Drawing


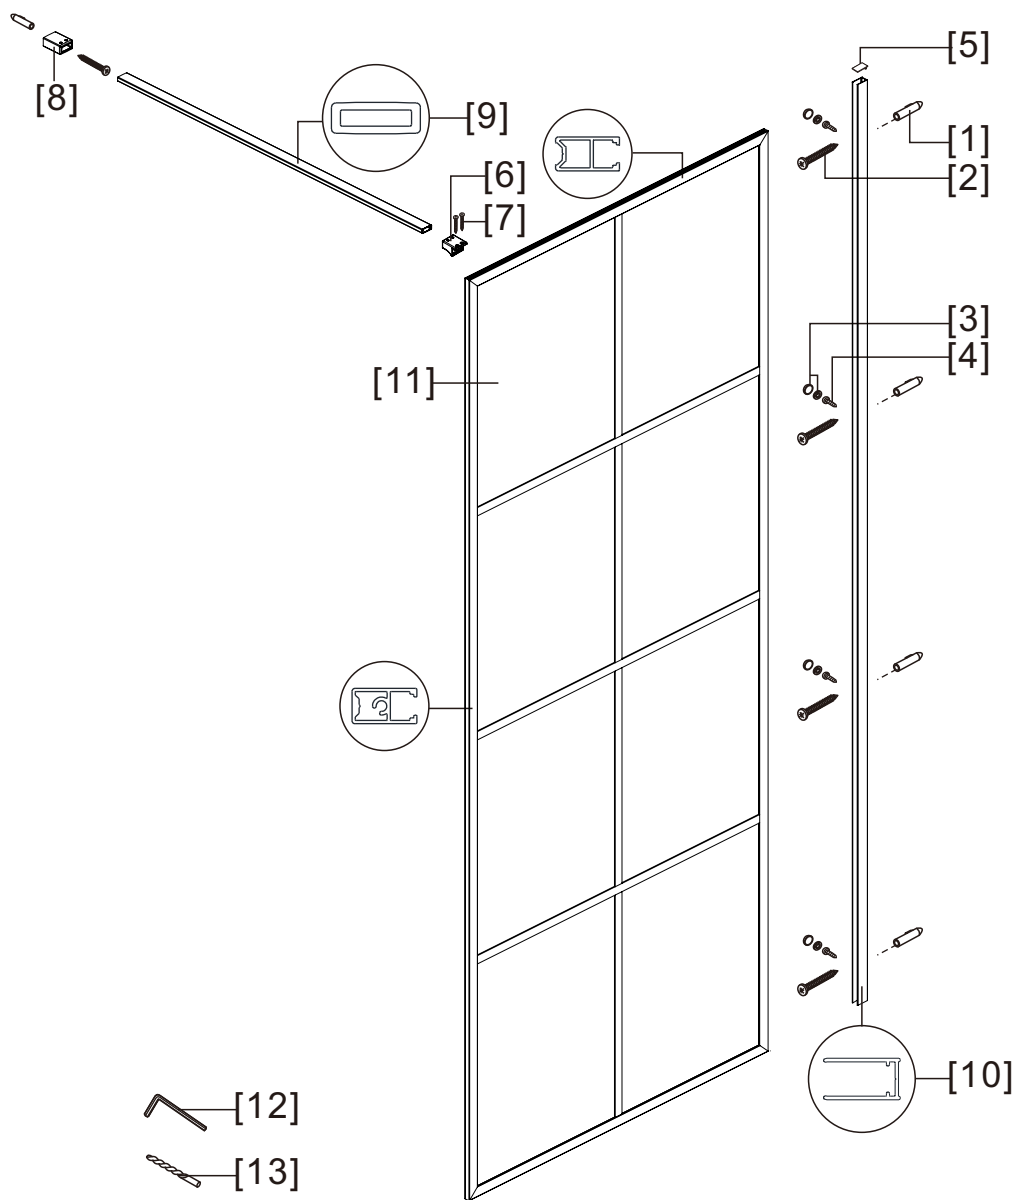


- [1] 5xWall Plugs.
- [2] 5xScrews ST4x35.
- [3] 4xScrew Caps.
- [4] 4xScrews ST4x10.
- [5] 1xWall Post Cover.
- [6] 1xSupport Bar Glass Clip.



- [7] 2xScrews ST4x12.
- [8] 1xSupport Bar Wall Bracket.
- [9] 1xSupport Bar.
- [10] 1xWall Post.
- [11] 1xSide Panel.
- [12] 1xAllen Key.
- [13] 1x3.2mm Bit.

◆ Installation Steps



Step 1

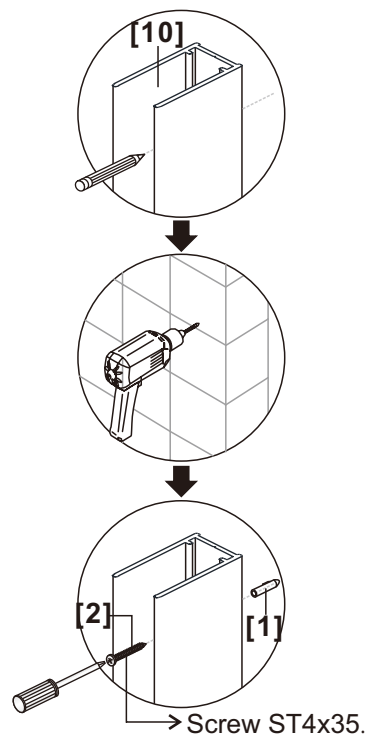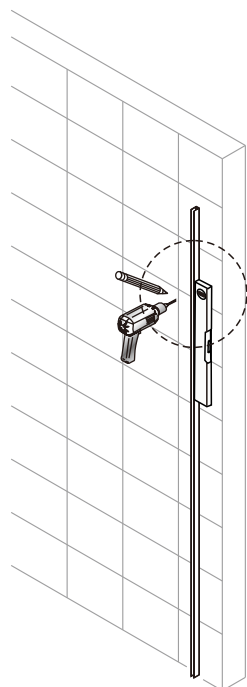



Step 2

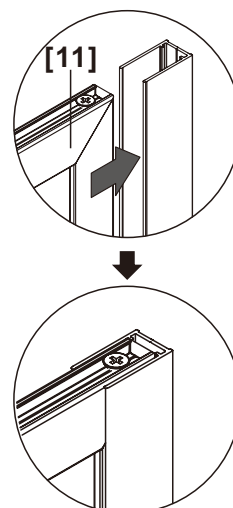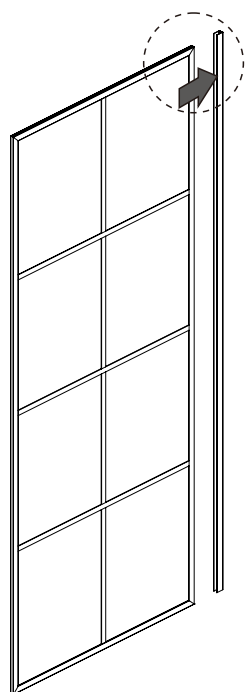

Step 3

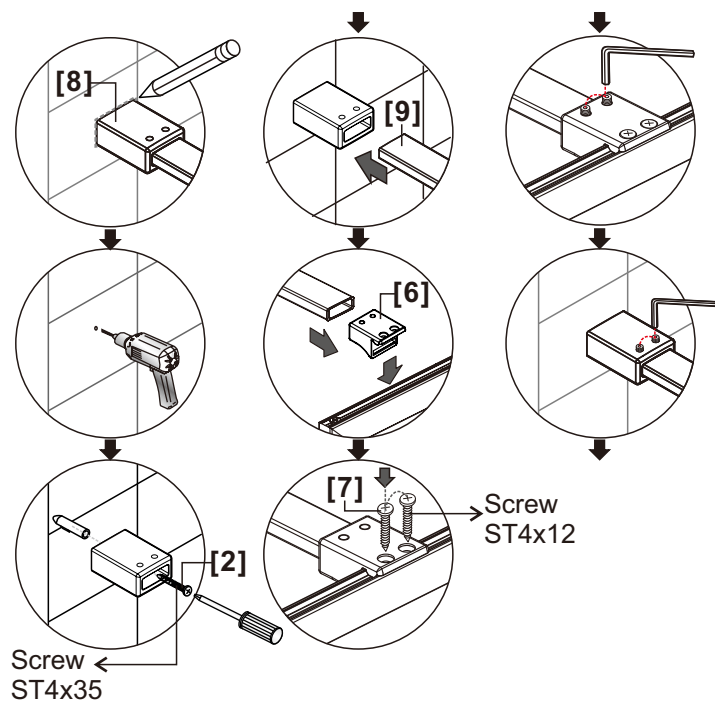
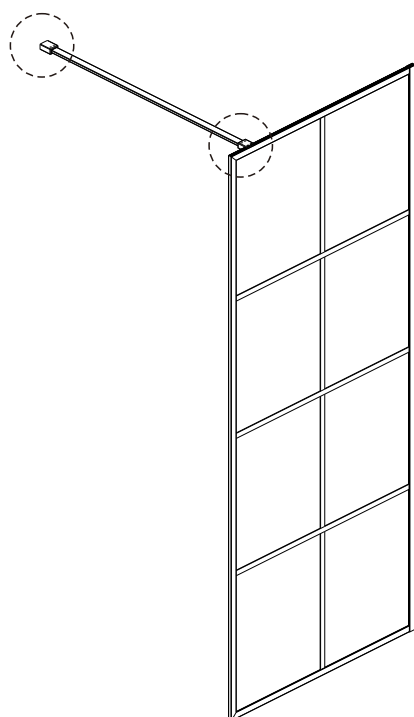


Step 4

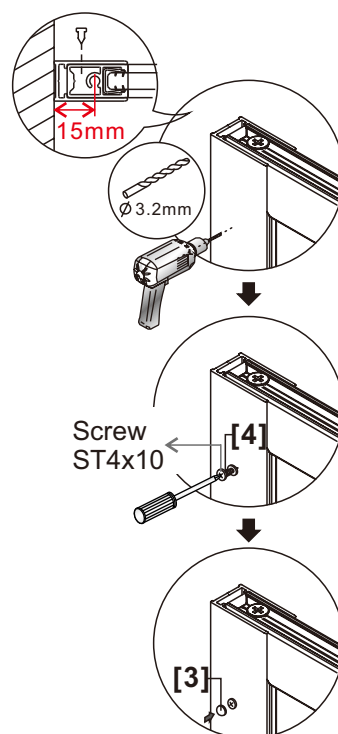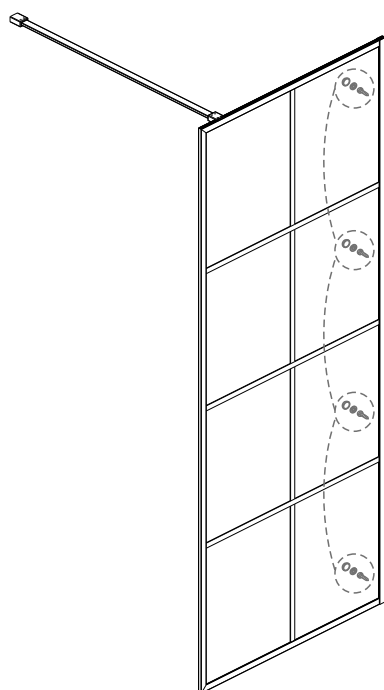


View from inside

Step 5

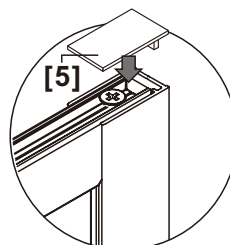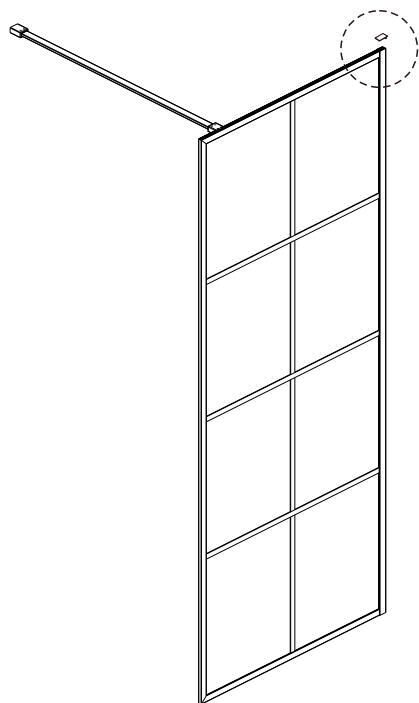

Step 6

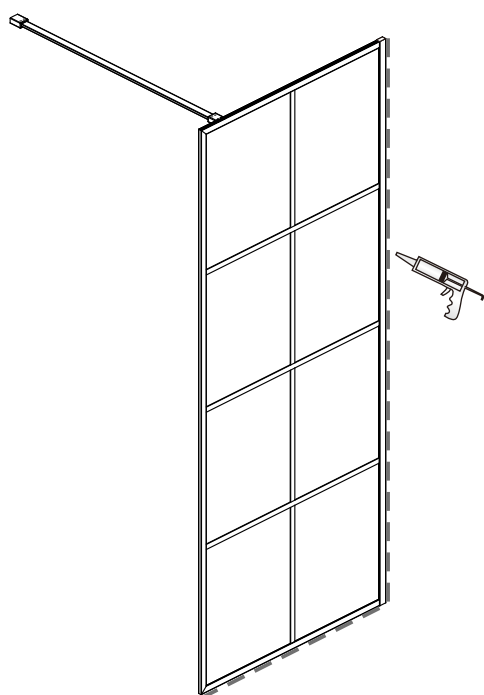

Allow 24 hours for silicone to dry before use.